

WATERPROOF EXTERIOR SWITCHES



Part Number	Description
41300801	2-WAY WATERPROOF SWITCH
41300804	3-WAY WATERPROOF SWITCH



Part Number	Description
41300802	2-WAY



Part Number	Description
41300912	WATERPROOF ELECTRIC BOX PVC



Part Number	Description
41300913	COVER W/ PLUNGER FOR 41300912 BOX



Part Number	Description
01-4400-70	AIR PRESSURE SWITCH FOR DOME LAMPS 36" LONG 2-CONDUCTOR CABLE 4.56"X 2.81" BOX



Part Number	Description
01-4400-71	AIR PRESSURE/RELAY SWITCH FOR DOME LAMPS 24" LONG 4-CONDUCTOR CABLE 4.75"X 4.50" BOX

MISCELLANEOUS SWITCHES & TIMERS


Part Number	Description
01-4438-70	INTERIOR SWITCH FOR DOME LAMPS



Part Number	Description
P-80-130	TOGGLE SWITCH CUP BACK MOUNT
P-80-131	TOGGLE SWITCH CUP SIDE MOUNT



 
Part Number	Description
41300803	TOGGLE SWITCH 2-WAY



 
Part Number	Description
41300805	TOGGLE SWITCH 3-WAY
41300806	TOGGLE 4-WAY



Part Number	Description
38046	ABS ACCESSORY SWITCH

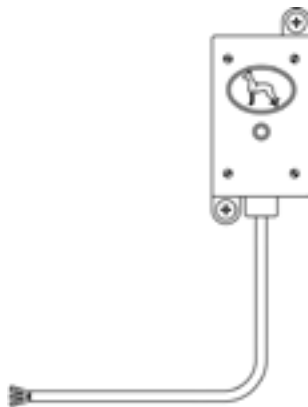TIMER SWITCHES


Part Number	Description
01-4424-70	40 MINUTE ELECTRONIC 2-WAY TIMER SWITCH FOR DOME LAMPS 72" LONG 3-CONDUCTOR CABLE

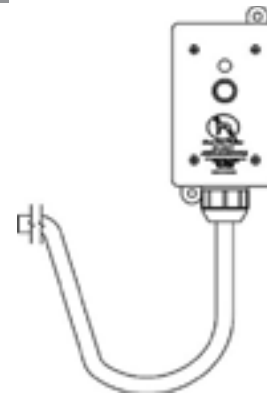

Part Number	Description
01-4436-71	ELECTRONIC TIMER SWITCH FOR DOME LAMPS PROGRAMMABLE TIMER 20-40-60-80 MINUTES
01-4436-72	ELECTRONIC TIMER SWITCH FOR DOME LAMPS 40 MINUTE TIMER